


TAKE IT EASY.

Finding Your LockNLoad


HOW TO MEASURE FOR A CUSTOM SIZE LOCKNLOAD

Attaching directly to TimberLine Tower							
STEP 1		STEP 2		STEP 3			
Measure: center of Raised Rail (L) to Raised Rail (R)		Measure: center of front roof rack tower to center of back tower		Select Platform Size			
Min	Max	Min	Max	Size			
28.5"	39.75"	27"	33"	К			
34"	45"	27"	39"	В			
45"	56"	28"	54.5"	J			
28.5"	39.75"	35"	62.5"	E			
34"	45"	35"	62.5"	N			
41.5"	53"	35"	62.5"	Н			

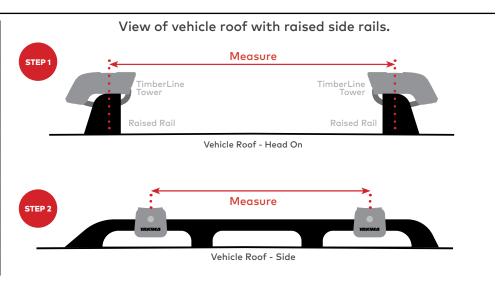

Attaching directly to SkyLine Tower							
STEP 1		STEP 2		STEP 3			
Measure: center of Landing Pad (L) to Center of Landing Pad (R)		Measure: center of front roof rack tower to center of back tower		Select Platform Size			
Min	Max	Min	Max	Size			
30"	41.25"	27"	33"	К			
35.5	46.5"	27"	39"	В			
46.5"	57.5"	28"	54.5"	J			
30"	41.25"	35"	62.5"	E			
35.5"	46.5"	35"	62.5"	N			
43"	54.5"	35"	62.5"	Н			

View of vehicle with fixed points, tracks, or flush siderails. Measure

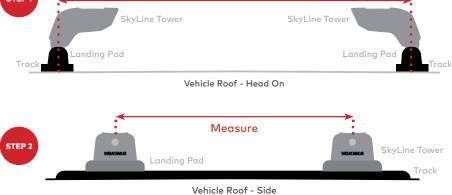

Attaching directly to Roof Rack Crossbars						
STEP 1		STEP 2		STEP 3		
Measure: inside of roof rack tower (L) to Inside of roof rack tower (R)		Measure: center of front roof rack tower to center of back tower		Select Platform Size		
Min	Max	Min	Max	Size		
34"	45.25"	27"	33"	К		
39.5"	50.5"	27"	39"	В		
50.5"	61.5"	28"	54.5"	J		
34"	45.25"	35"	62.5"	E		
39.5"	50.5"	35"	62.5"	N		
47"	58.5"	35"	62.5"	Н		

View of vehicle roof with existing crossbars.

